



**Profiles of rubber, sponge rubber,  
silicone, foam silicone**

D-64579 Gernsheim - Germany

Otto-Hahn-Straße 12

Telefon +49 (0) 62 58 / 932250

Telefax +49 (0) 62 58 / 4997


e-mail: [schild@gummi-plast.de](mailto:schild@gummi-plast.de)

internet: <http://www.gummi-plast.de>

## PROFILE List

Part 2

profile no. Z1-422 to F 727

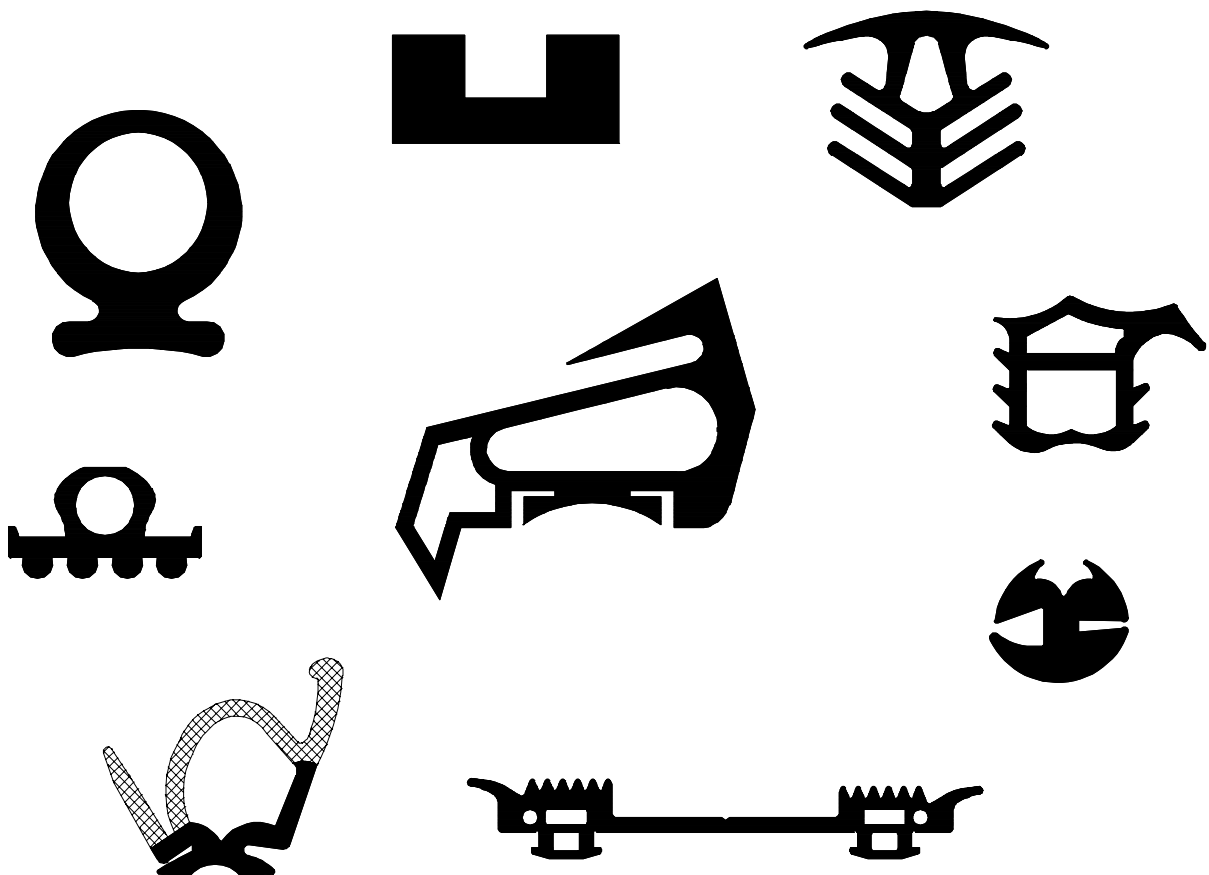

## Important informations!

With this profile list we present to you a selection from our wide range assortment. The catalog informs you about kind and size of the profiles, which we manufacture in the context of our production programme.

We want like to point the existence of costumer protection for some profiles out to you.

Naturally we manufacture also your profiles from solid rubber, sponge rubber, solid silicone, foam silicone and soft PVC, after drawing or sample.

The abbreviations in front of the profile numbers stand for:


AF	= General window sealing profiles
AN	= Frame sealing profiles
AU	= Buffer profiles
F	= Facade profiles
FA	= Joint cover profiles
FN	= Flag (note) profiles
FR	= Filler profiles
FT	= Moulded parts
FU	= U-profiles for windows
GIR	= Solid rubber round section cords
GIV	= Solid rubber square section cords
H	= H-profiles
HF	= Profiles for wooden windows
HR	= Semiround profiles
K	= Refrigerator profiles
KL	= Clamping profiles
KS	= Wedge and plug profiles
MD	= Centre sealing profiles
RI	= Groove profiles
RT	= Roller-shutter and finger-protection profiles
S	= Other profiles
SC	= Tube profiles
SE	= Clip profiles
SL	= Screen strip profiles
T	= T-profiles
TR	= Trapezoidal profiles
TU1-	= Technical-U-profiles
VP	= Glazing profiles
WI	= Angle profiles
Z1-	= Door frame profiles




Z1-422



S423

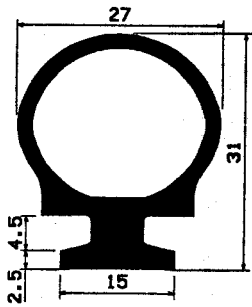

RT424

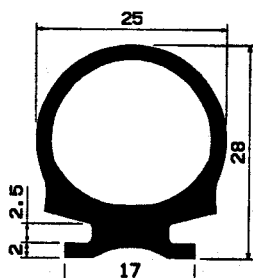


RT425



TU1-426



S427

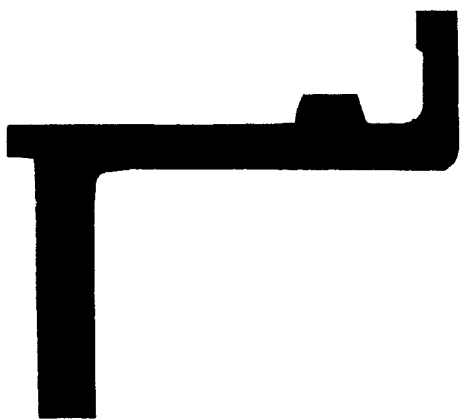


AF428



Z1-429



AN430

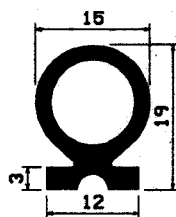


RT431



KL433



S434

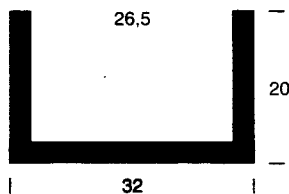

TU1-435



Z1-436























S437




MD438




S432

			
AN439	AN440	AN441	S442
			
S443	TU1-444	S445	S446
			
AN447	AN448	AN449	S450
			
S451	KL452		
			
KL453			S454
			
KL455	S456	F457	

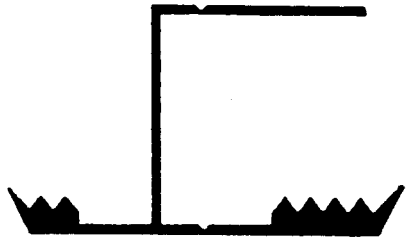

F459

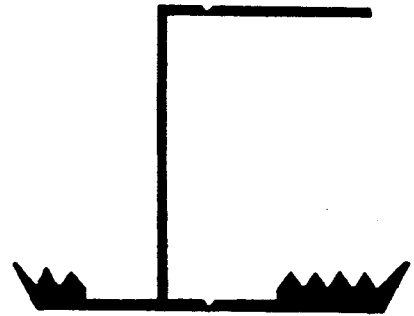

F460



FA461



KS462




S463



AF464

M=1:2

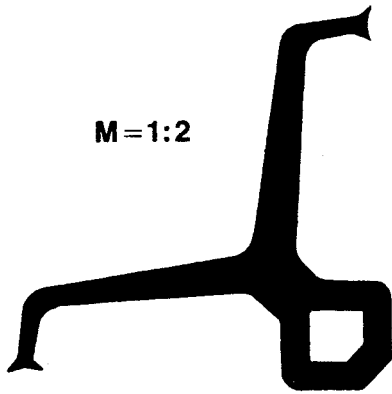

S465



HF466



Z1-467



AN468



TU1-469



S470



S471




AN472



KL473/1



F475

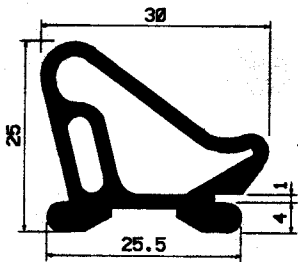


RT476



S477



S478

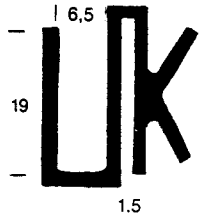

S479




S480




F482



AF481

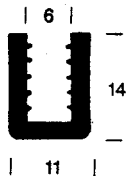


TU1-483



TU1-484



AN486

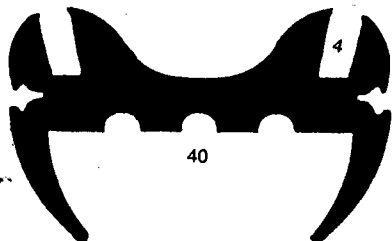

KL485



H487



H488



S489



Z1-490



FA491



AN492



SC493



S494



AF495




S496




Z1-497



S498

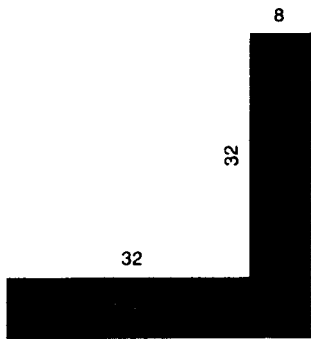


WI500

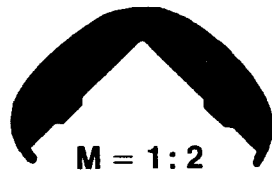

S499



Z1-501

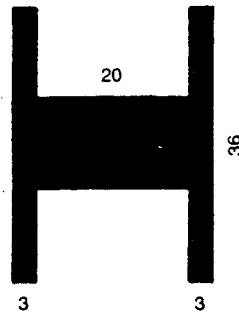

H502




S503



S504



AN505

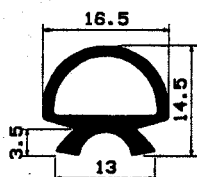


RT506



K507



Z1-508

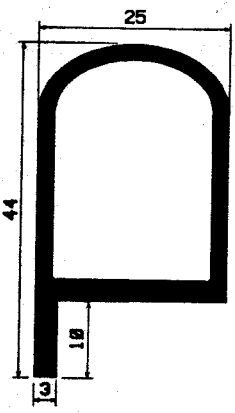

RT509



Z1-510




S511



KS512



AN514

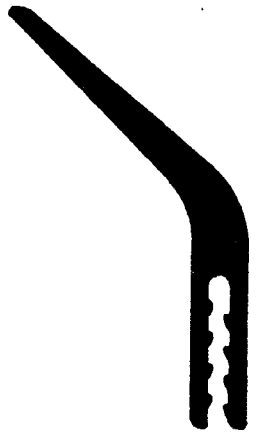

AF515




S516




KL518



KS519

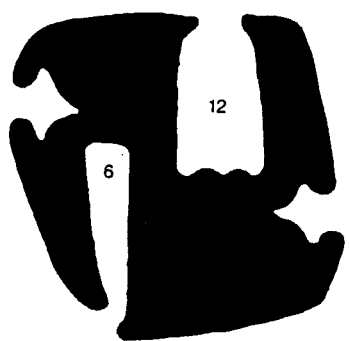

KL520

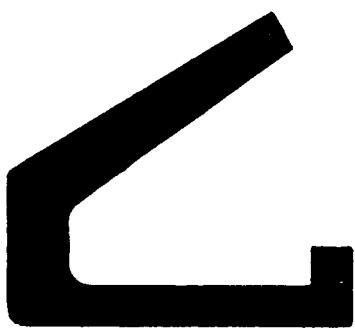


S521




FN522




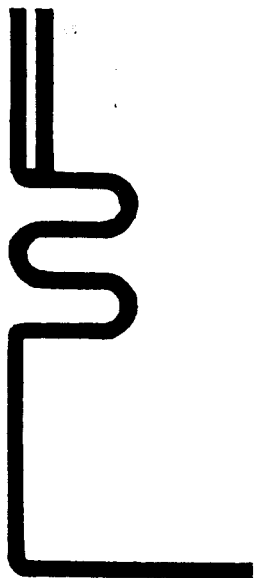


S523

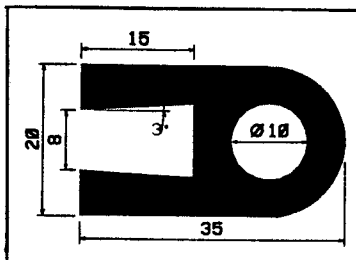


S524

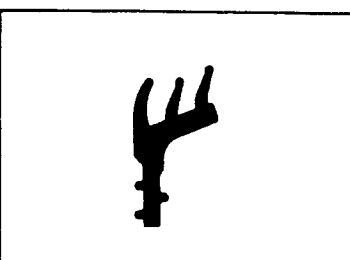


S525

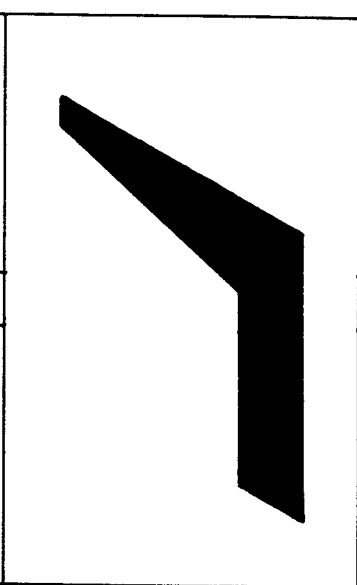


S527

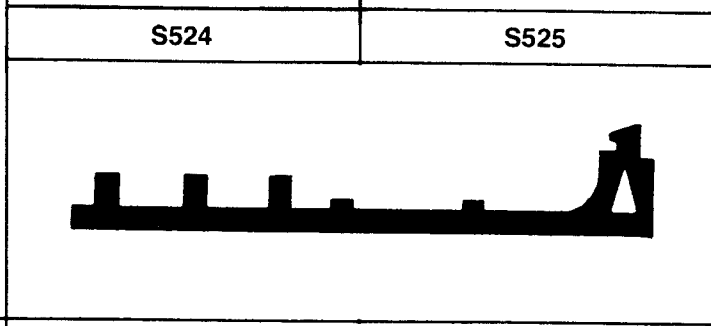


S526

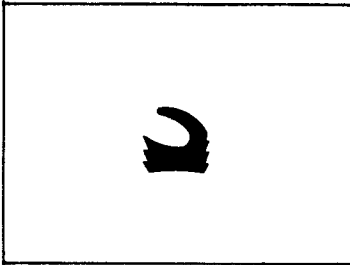


AN528

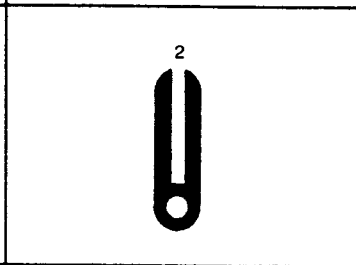


TU1-529

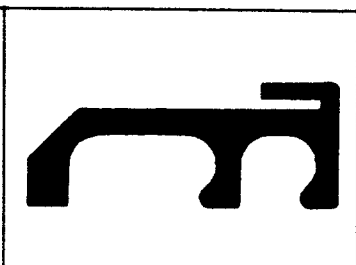


S530

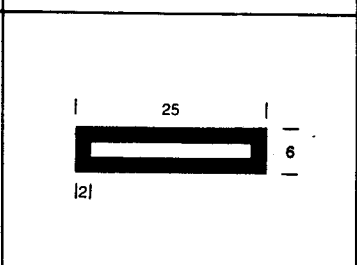


S531

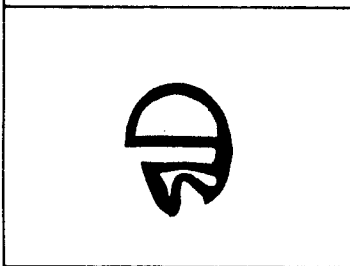


Z1-532

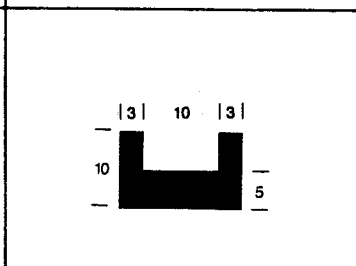


TU1-533

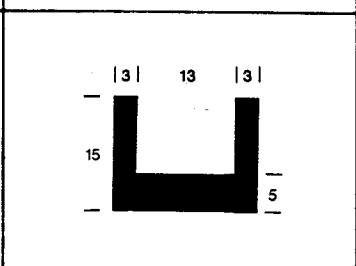


TU1-534

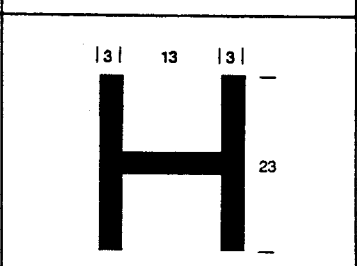

H535

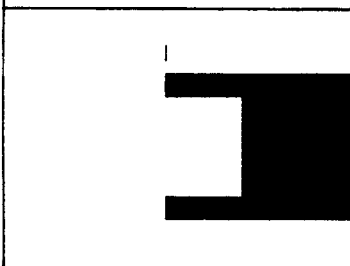


H536

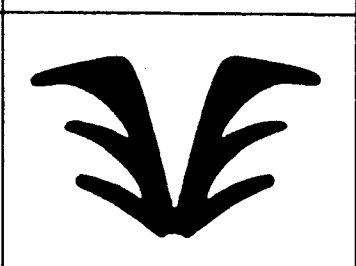

FA537




HF538

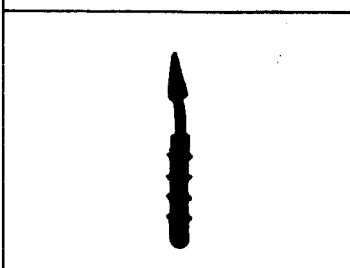


S539



Z1-540

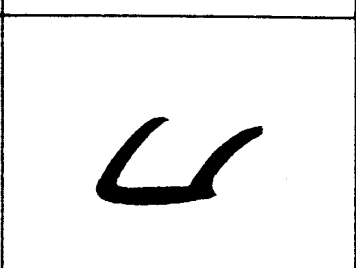

S541

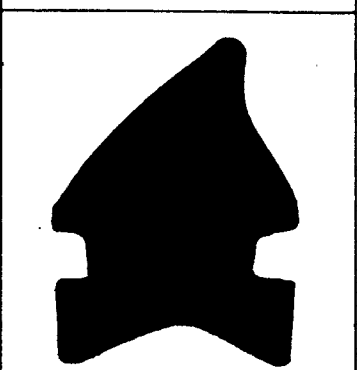

S542



S543




S544




TU1-545



S547

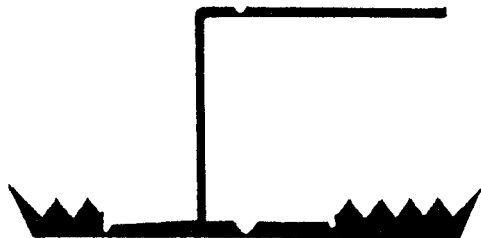

F546

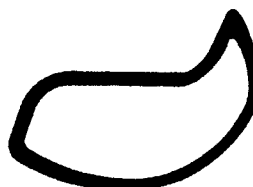

S548



S549



AN550




AN551




S552



S553

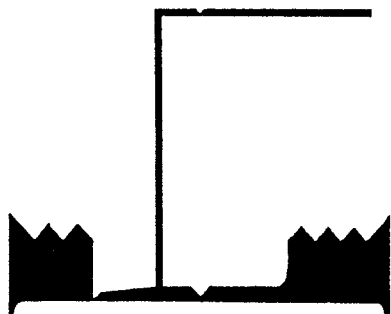

F554

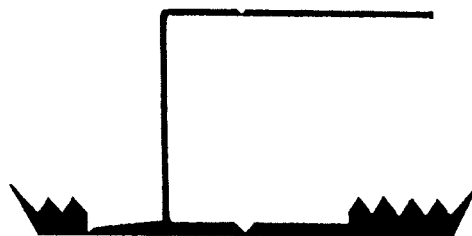


F555




Z1-556



KL557

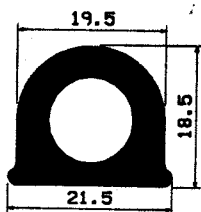

RT558

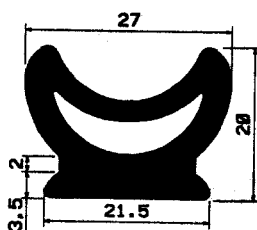


RT559



AN560



TU1-561

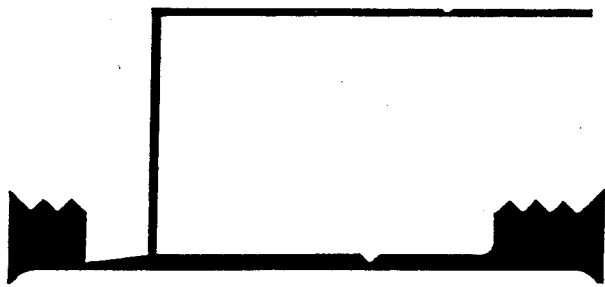


F562



TR564




S565

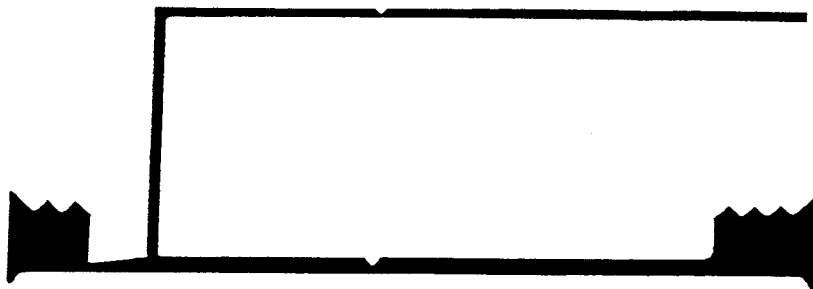

F563




S566

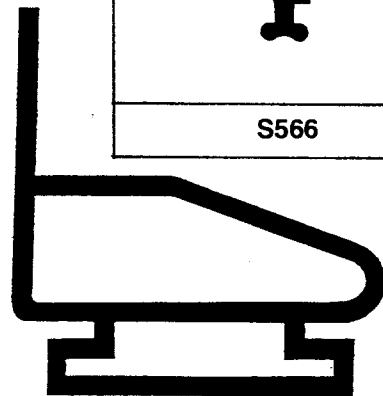

AF567



S568

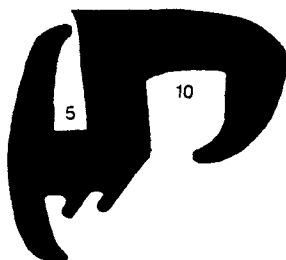

KL569



S570



S571



F572




F573



S574




Z1-575

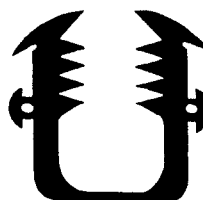

FU576




AN577

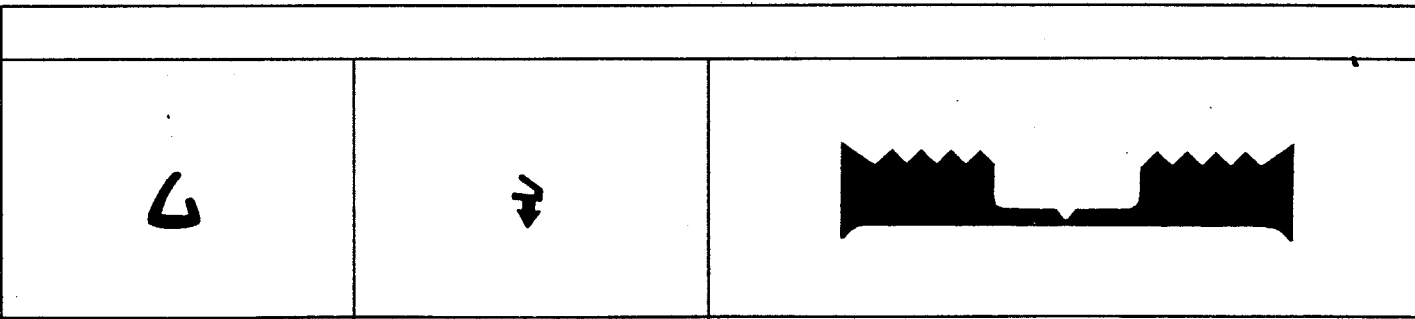

TU1-578

AN579

F580

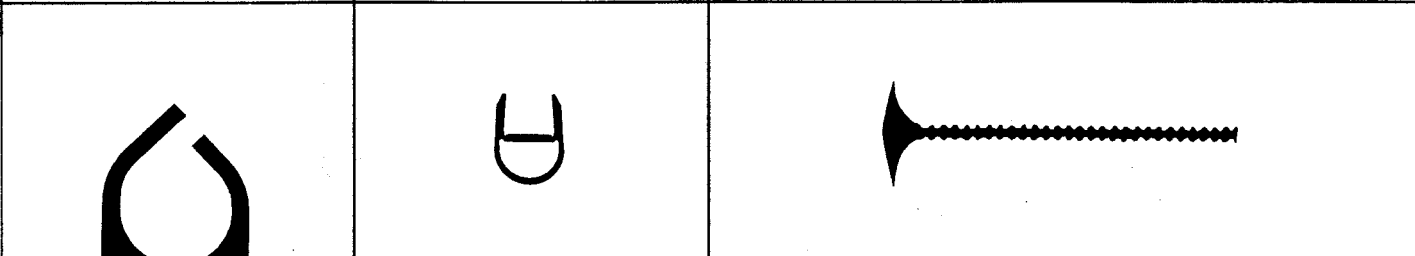


S581

S583



S582

F584

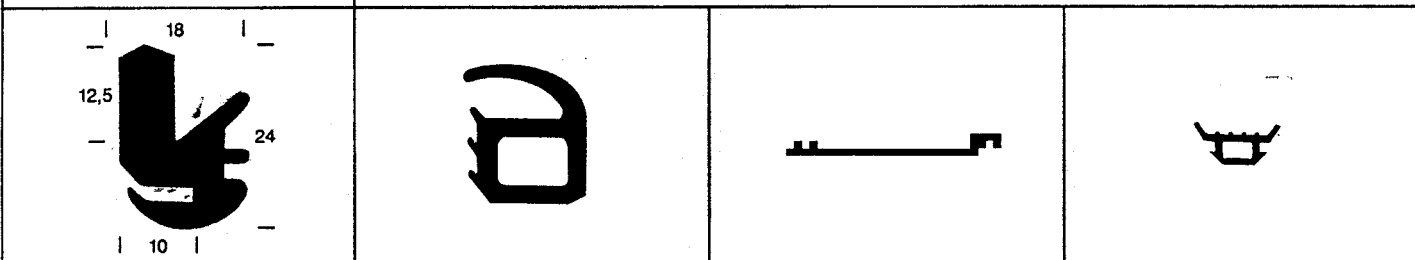


S585

Z1-586

S587


AN589

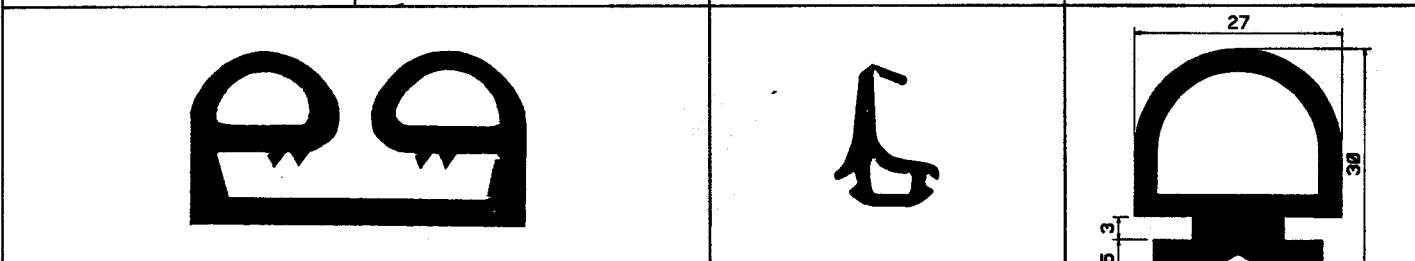

S588

MD590


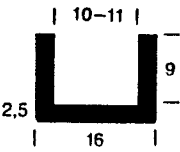


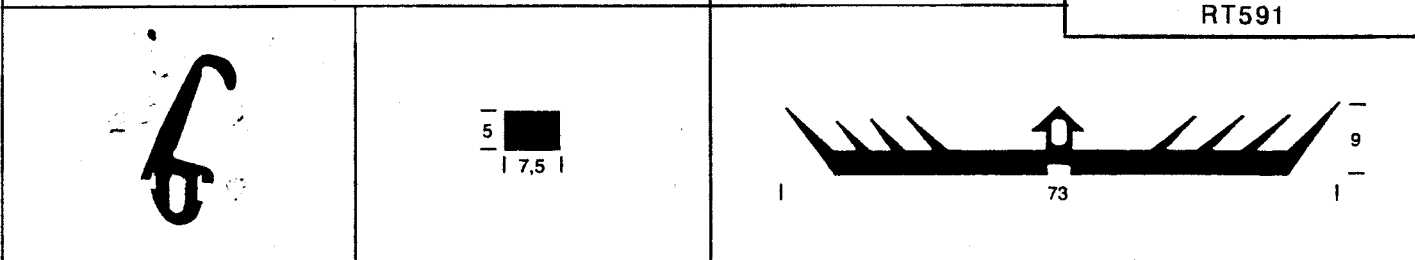





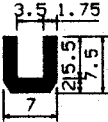

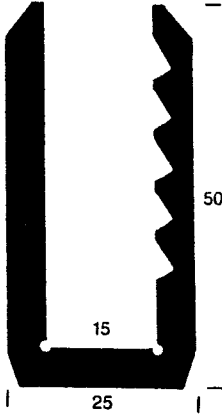








RT591

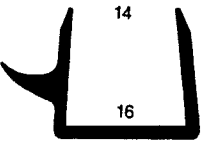


MD592

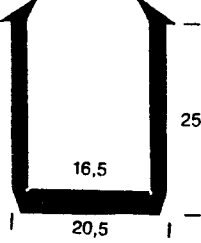GIV593

F594

 <p>60 4</p>	 <p>10-11 9 2,5 16</p>		
<p>F595</p>	<p>TU1-596</p>	<p>S597</p>	
 <p>1,3 10 4</p>	 <p>1,3 10 4</p>	 <p>6 4 30 8 30 6</p>	
<p>TU1-598</p>	<p>TU1-599</p>	<p>H601</p>	
		 <p>14 16</p>	
<p>S600</p>	<p>Z1-602</p>	<p>TU1-603</p>	<p>Z1-604</p>
 <p>3,5 1,75 7,5 7</p>		 <p>50 15 25</p>	
<p>TU1-605</p>	<p>S607</p>	<p>TU1-608</p>	<p>S609</p>
	 <p>25 16,5 20,5</p>		<p>AN612</p>
<p>S610</p>	<p>TU1-611</p>	<p>TU1-608</p>	<p>AN612</p>
			
<p>S613</p>	<p>TU1-614</p>	<p>S615</p>	<p>AN616</p>

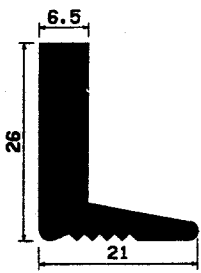


S617




S618



Z1-619



TU1-620

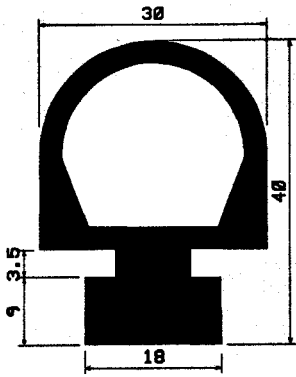

RT621



AN622




S623



S624



S625

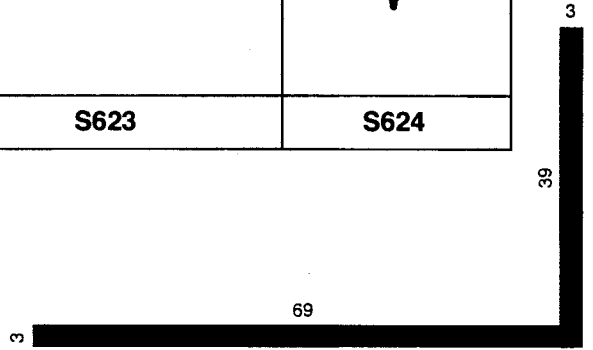

WI626



S627



S628



S629



S630



KS631




AN632





VP633



Z1-634

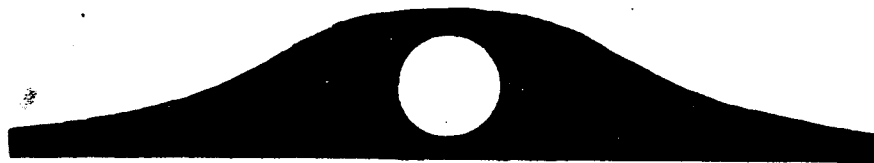

S635

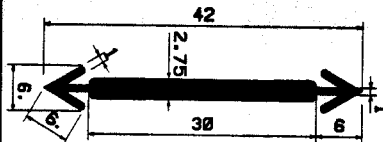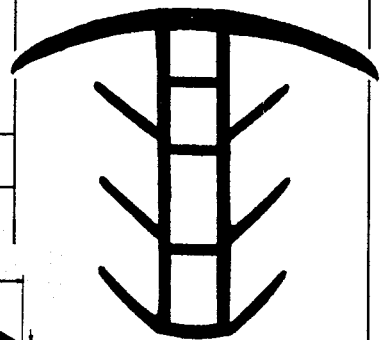

FN637

FN638

S639

FA636




Z1-640

Z1-641

Z1-642

TU1-643

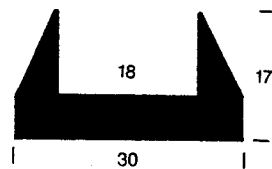

S644

TR645

S646


TU1-648



S647

S649

S650

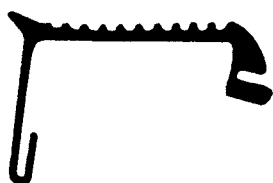

AN651

S652


S653




VP654



S655

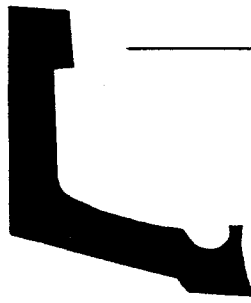

S656

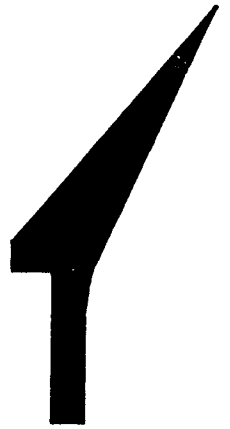


S658



S657



S659

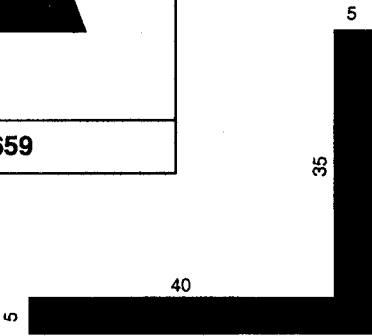

WI660



SC661




S662



S663




S664

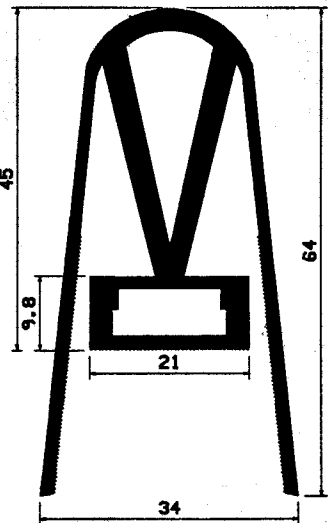

RT665



Z1-666

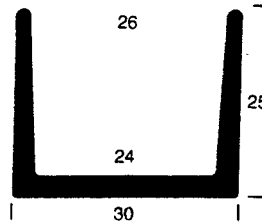

TU1-667



FR668



FR669




FR670



Z1-671





TU1-672




S673




S674



MD675

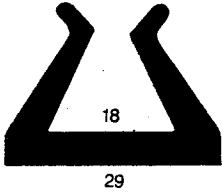

TU1-676

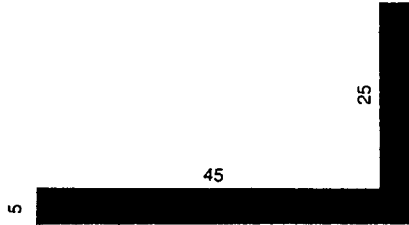


WI677




WI678




WI683

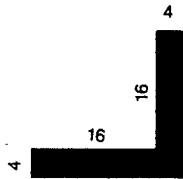


WI684

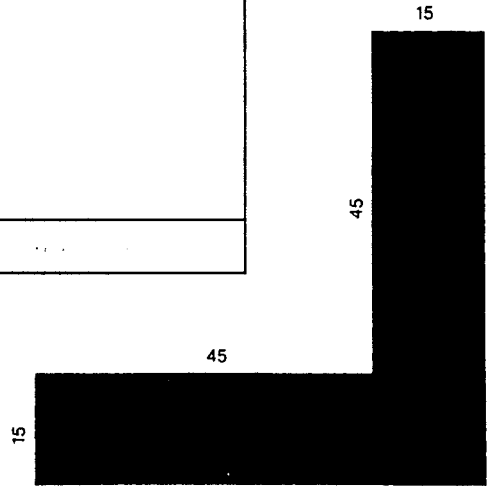


WI682

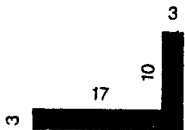

WI685

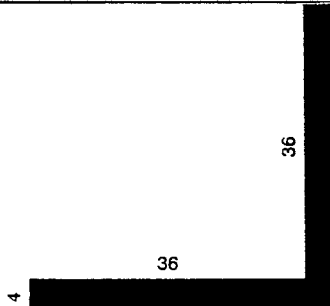

WI686



WI687




WI688




WI691




S692

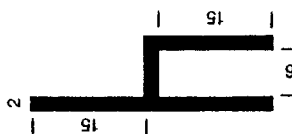


S693

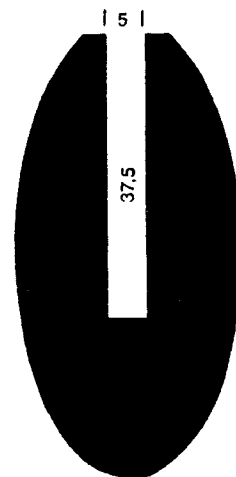

TU1-694




TU1-695

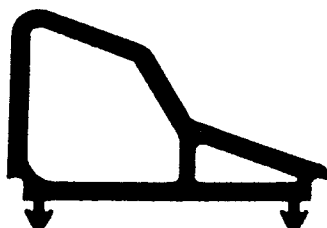

S696




AN697

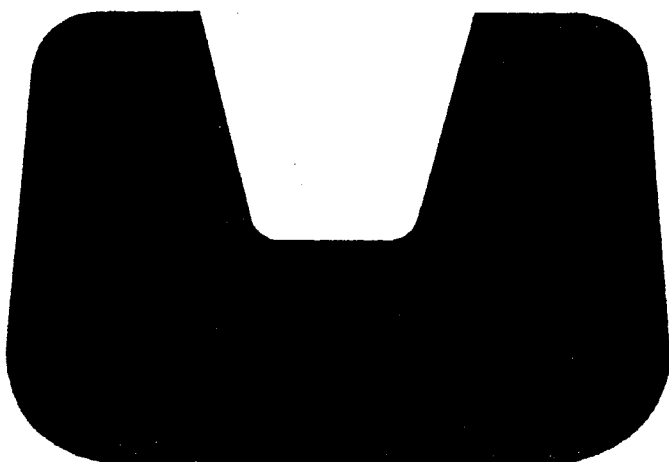


S698




F699



F700




F701

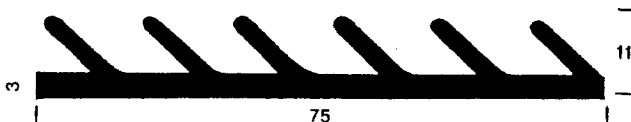

F703




F702

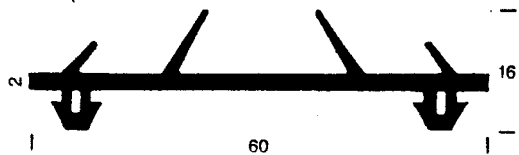

F704




F705




F706




F707



F708




F709



F710




F711



F712




F713

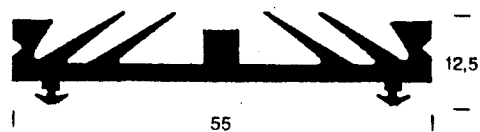


F714




F715



F716



F717




F718




F719



F720



F721




F722




F724



F725

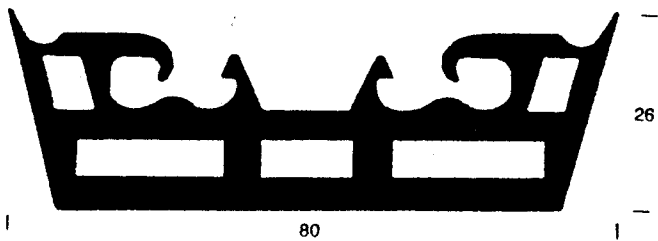

F726



F727